

# PHASER 7400

## (paper cheat sheet)

### What kind of paper can I print on?

(Results may vary depending on brand of paper used. Xerox recommends Xerox brand paper.)

- \_plain, colored, preprinted, or prepunched paper (17-28 lb bond or 22-39 lb cover)
- \_heavy plain paper or letterhead (29-34 lb bond or 40-47 lb cover)
- \_thin card stock (35-50 lb bond or 48-69 lb cover)
- \_thick card stock (51-57 lb bond or 70-80 lb cover)
- \_extra thick card stock (58-72 lb bond or 81-100 lb cover)
- \_glossy paper (120-160 g/m<sup>2</sup>)
- \_envelopes
- \_labels
- \_transparencies (Phaser 35-Series Premium Transparency Film)

### What kind of paper can I NOT print on?

- \_rough or porous media, such as canvas or inkjet paper
- \_plastic media
- \_folded or wrinkled paper
- \_photocopied paper
- \_paper with staples
- \_envelopes with windows, metal clasps, or adhesives with release strips
- \_padded envelopes
- \_non-laser glossy paper
- \_transparencies other than Phaser 35-Series Premium Transparency Film
- \_label stock that has one or more labels removed from a sheet
- \_media that is less than 17 lb Bond or more than 100 lb Cover

**If your paper doesn't fit nicely into one of these categories, then it probably means you cannot use it. If you have any questions, come see Joel in rm 432 or call him at 844-8808.**